



**Manufacturers & Suppliers of Estate & Garden Machinery**  
**TELEPHONE 01473 328272 • FAX 01473 327177**  
**[www.schsupplies.co.uk](http://www.schsupplies.co.uk)**

## **OPERATING INSTRUCTIONS**

**MUST BE READ PRIOR TO OPERATING THIS MACHINE**



### **Artificial Surface Power Brush**

**Ref: ASPB**

## DESCRIPTION

The Artificial Surface Power Brush is a compact walk-behind sweeper suitable for year-round use.

Highly manoeuvrable, the sweeper provides quick and effective cleaning wherever it's needed. The brush carrier can be angled to the left or right to sweep debris off to the side.

The brush unit is ideal for clearing snow from walkways or areas where large machines cannot be used. The brush speed and quantity of nylon threads makes this machine ideal for artificial and hard surface play areas such as tennis courts.

## SPECIFICATIONS

Sweeping width	700mm (27.5")
Brush Diameter	350mm (14")
Transition	3 Forward, 1 Reverse
Engine	Briggs & Stratton 212cc
Starter	Recoil
Wheel Size	4.10 x 4
Weight	74kg

## SAFETY INSTRUCTIONS

- Be aware of your surroundings and do not use the brush in close proximity to other people.
- Never place hands or feet under the power brush.
- Never attempt to clear blockages whilst the engine is running.
- Never leave the power brush unattended with the engine running.
- Do not start the engine with the power brush in gear

If in doubt, please call the SCH customer help line at **01473 328272**.

## ASSEMBLY



Step 1. Remove the 2x12mm bolts to allow the handle to drop into position.



Step 2. Align the handle and re-insert the 2x12mm bolt



Step 3. Remove the 2x10mm bolts which are for the gear lever



Step 4. Attach the gear lever using 2x10mm bolts



Step 5. Check cable tension, adjust if required



If required:

Remove most of the slack using adjusters

Once correct tension is set, lock down adjuster using gold coloured nut.

## OPERATION

To begin sweeping:

1. Start the engine
2. Select forward gear 1,2 or 3
3. To engage the brush, depress the left-hand lever on handle bar
4. To engage drive, depress the right- hand lever on the side of handle bar
5. Remember to select the correct speed for the work you wish to carry out

## WARRANTY

Your Artificial Surface Power Brush is guaranteed for 12 months from the date of purchase. This guarantee covers faults which may occur from defective parts or manufacture.

**Damage caused by inability to follow instructions will void warranty.**



If you are missing your free brochure contact us on  
**01473 328272**, email [sales@schsupplies.co.uk](mailto:sales@schsupplies.co.uk), or  
visit our website [www.schsupplies.co.uk](http://www.schsupplies.co.uk)

